



## AN 401

# Proper SIMS Quantification of Boron in SiGe structures: Comparison of Cs and O Ion Beam Bombardment

May 7, 2007 (Version 3.0)

## Discussion

The analysis of SiGe structures by SIMS using Cs ion bombardment does not provide an accurate profile shape for Boron. Known limitations of this analysis include significant tailing of the boron profile from Cs knock-on and chemical segregation effects. In order to obtain the most accurate data for these SiGe structures, EAG recommends that two separate SIMS analyses be performed.

To meet current market financial needs, and when the most accurate B profile shape is not needed, EAG offers the analysis of SiGe structures using Cs bombardment at a basic cost of one unit per sample. For this unit charge Ge composition, dopant concentrations and low background levels of atmospheric contaminants are provided using a quadrupole based SIMS instrument. As illustrated below, if the shape of the boron profile is critical to the analysis, a second profile using O ion bombardment is necessary.

SiGe structures are analyzed using Cs ion bombardment to obtain accurate compositional information and low background levels of atmospheric contaminants. Figure 1 shows the typical negative ion profile acquired using Cs ion bombardment. B, C, O, P, As and Ge were acquired simultaneously and quantified in one analysis at minimal cost. The Ge composition is obtained with  $\pm 3\text{-}5\%$  accuracy up to 80% Ge, together with very low detection limits for C and O. However, the known limitations of analyzing boron with Cs ion bombardment results in a distorted tail shape. Figure 2 shows a typical positive ion profile acquired using O ion bombardment. This analysis accurately shows the true boron concentration profile shape. Using this analysis, it is easily observed that the boron dopant is entirely contained within the SiGe layer and that two spikes are observed at the Si/SiGe and SiGe/Si interfaces. Based on these data, EAG strongly recommends that two analyses be performed for the proper quantification of B, C, O, P, As and Ge in SiGe structures.

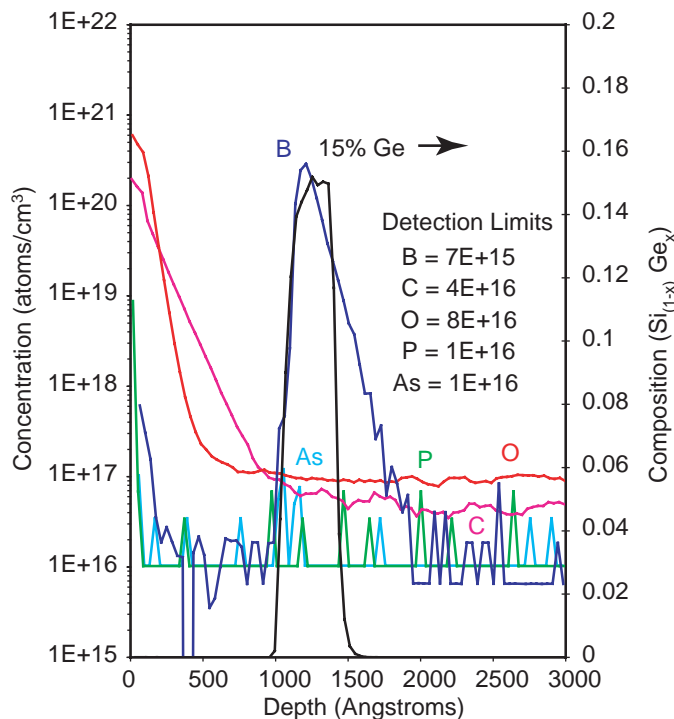


Figure 1. SiGe Analysis Using 2keV Cs

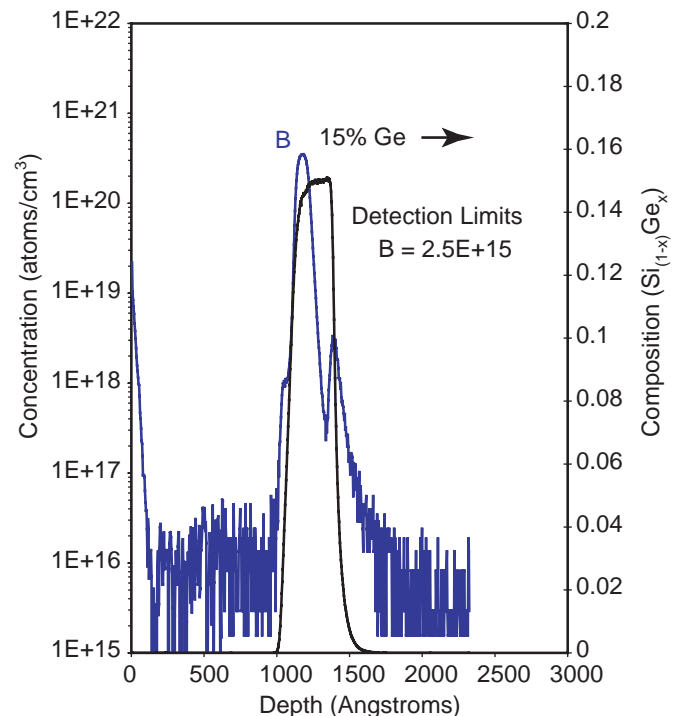


Figure 2. SiGe Analysis Using 1keV O<sub>2</sub> w/O-leak

---

**United States Locations**

Tempe, Arizona  
+1 480 239 0602 info.az@eaglabs.com  
+1 602 470 2655 fax

Sunnyvale, California  
810 Kifer Road  
+1 408 530 3500 info.ca@eaglabs.com  
+1 408 530 3501 fax

1135 E Arques Avenue  
+1 408 738 3033  
+1 408 738 3035 fax

785 Lucerne Drive  
+1 408 737 3892  
+1 408 737 3916 fax

Peabody, Massachusetts  
+1 978 278 9500 info.ma@eaglabs.com  
+1 978 278 9501 fax

Chanhassen, Minnesota  
+1 952 828 6411 info.mn@eaglabs.com  
+1 952 828 6449 fax

East Windsor, New Jersey  
+1 609 371 4800 info.nj@eaglabs.com  
+1 609 371 5666 fax

Syracuse, New York  
+1 315 431 9900 info.ny@eaglabs.com  
+1 315 431 9800 fax

Raleigh, North Carolina  
+1 919 829 7041 info.nc@eaglabs.com  
+1 919 829 5518 fax

Round Rock, Texas  
+1 512 671 9500 info.tx@eaglabs.com  
+1 512 671 9501 fax

**International Locations**

Shanghai, China  
+ 86 21 6879 6088 info.cn@eaglabs.com  
+ 86 21 6879 9086 fax

Tournefeuille, France  
+ 33 5 61 73 15 29 info.fr@eaglabs.com  
+ 33 5 61 73 15 67 fax

Frankfurt, Germany  
+ 49 (0) 693053213 info.de@eaglabs.com  
+ 49 (0) 69307941 fax

Tokyo, Japan  
+ 81 3 5396 0531 info.jp@eaglabs.com  
+ 81 3 5396 1930 fax

HsinChu, Taiwan  
+ 886 3 5632303 info.tw@eaglabs.com  
+ 886 3 5632306 fax

Uxbridge, United Kingdom  
+ 44 (0) 1895 811194 info.uk@eaglabs.com  
+ 44 (0) 1895 810350 fax